
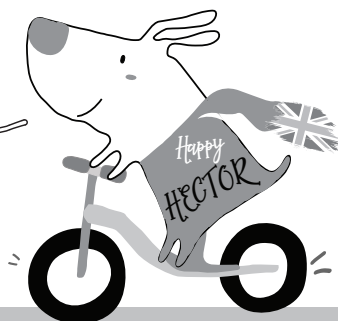
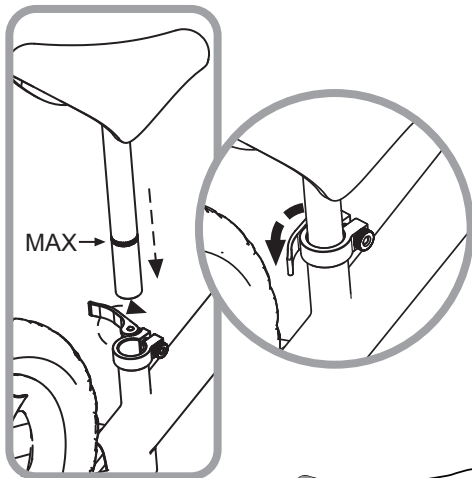


Ride-Ezy™

10" Ride-ezy Go balance bike

 **WARNING**
ADULT ASSEMBLY REQUIRED
Keep away from children until fully assembled

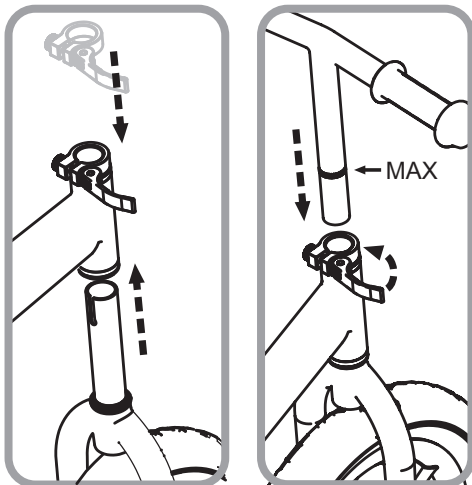

Read these instructions before use, follow them and keep them for reference. Recommended age: 2 to 5 years

WARNING!

1. Adult assembly required, no tools required.
2. Before riding, please check that all fasteners are correctly secure.
3. Always wear shoes when riding.
4. For the child's personal safety, always use safety equipment such as helmet, elbow pads, knee pads, and gloves.
5. To be used on smooth paved surfaces and away from traffic. Not for use on public roads.
6. Not to be used at dusk, at night, or at times of limited visibility and unfit weather.
7. Replace worn or broken parts immediately.
8. Only one rider at a time.
9. Maximum weight is 50 kgs.
10. Suitable for children between 2 and 5 years old.
11. The toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
12. Do not adjust handlebar or stem beyond the maximum mark.



Distributed by
Ride-ezy, Global Opportunities
Unit 23 Link Business Centre, Malvern WR14 1UQ
Aftersales support at support@globalopportunities.co.uk

